

CA SEAN USA
WOOLSEY
• STUDIO •
CARE INSTRUCTIONS





CARE INSTRUCTIONS

We take great pride in making the work that we do.
It should last for generations if maintained and cared for well.

In this document we will show you how to care for our pieces.
If you have any questions, feel free to ask.



WOOLSEY PING PONG TABLE



CARE INSTRUCTIONS

Keep in a climatized room if and when possible. This will lessen the possibility of the wood moving. Note that wood will move naturally and joints can change over time. This is the natural property of wood.

Keep out of direct sunlight (even if inside).

Don't place any beverages or food items that are above or below room temperature on the top.

To clean, use a microfiber towel that is damp, and rub with the grain. If any moisture is left on the table, make sure and dry immediately.

If a scratch has penetrated the surface, it can be sanded out and refinished..

WOOLSEY SHUFFLEBOARD TABLE



CARE INSTRUCTIONS

Use climatic adjusters that are under the plank to dial in the perfectly flat surface. Check it for flatness as needed.

Maintain an even level of salt (wax) on the playing surface to ensure that pucks slide smoothly and evenly.

Keep out of direct sunlight (even if inside).

Don't place any beverages or food items that are above or below room temperature on the top.

To clean, use a microfiber towel that is damp, and rub with the grain. If any moisture is left on the table, make sure and dry immediately.

If a scratch has penetrated the surface, it can be sanded out and refinished.

WOOLSEY POOL TABLE



CARE INSTRUCTIONS

Keep in a climatized room if and when possible. This will lessen the possibility of the wood moving.

Keep out of direct sunlight (even if inside).

Don't place any beverages or food items that are above or below room temperature on the top.

To clean the felt, use only the brush that comes with the table, rubbing the brush always the same way, so that the felt lies the same way.

WOOLSEY OUTDOOR PING PONG TABLE



CARE INSTRUCTIONS

Keep in a climatized room if and when possible.

Keep out of direct sunlight (even if inside) when possible by using cover when not in play. We make an outdoor cover.

Difficult stains such as coffee or tea can be removed using a mild household cleaner/detergent. Rinse thoroughly with warm water and wipe dry.

For stubborn stains use a paste of baking soda and water and apply with a soft bristle brush. Light scrub for 15 to 20 seconds should remove the stains. Don't use excessive force or something that will scratch the surface.

Do not use acidic or abrasive cleaners or cleaners containing lye, or steel wool or any other abrasive pad. This will permanently damage the surface.

To clean, use a microfiber towel that is damp, and rub with the grain. If any moisture is left on the table, make sure and dry immediately.

ALL OTHER TABLES AND CHAIRS



Keep in a climatized room if and when possible.

Keep out of direct sunlight (even if inside).

To clean, use a microfiber towel that is damp, and rub with the grain.
If any moisture is left on the table, make sure and dry immediately.

If a scratch has penetrated the surface, it can be sanded out and refinished.

Upholstery materials like leather will age gracefully with wear and time. This is natural and will progress with age.